

Product Information

LABO-HR2VE-I/U/F/C

Flow transmitter LABO-HR2VE-I/U/F/C



- Optimised for use with oil
- 4...20 mA output linearised
- 0...10V output linearised
- Frequency output proportional, linear
- Programmable through teaching
- LED for status display
- All metal housing
- Fully potted IP 67
- All parameters programmable via USB interface ECI-1

Characteristics

Mechanical flow switch, for fluid media, with spring-supported piston and magnetic triggering of Hall sensors. Robust construction in brass or stainless steel.

The LABO electronics make various output signals available:

- Analog signal 0/4...20 mA (LABO-HR2VE-...I)
- Analog signal 0/2...10 V (LABO-HR2VE-...U)
- Frequency signal (LABO-HR2VE-...F) or
- A value signal Pulse / x Litres (LABO-HR2VE-...C)

A model with switching output is also available.

If desired, the range end value can be set to the currently existing flow using "teaching".


Technical data

| | | |
|------------------------|---|--|
| Sensor | analog Hall sensors | |
| Nominal width | DN 32 / 40 / 50 | |
| Process connection | female thread G 1 ¹ / ₄ ...G 2 (further process connections available on request) | |
| Metering range | 10...160 l/min | For details see table "Ranges" |
| Pressure loss | ~ 4...7 bar at Q _{max} | |
| Q _{max} | up to 160 l/min | |
| Tolerance | ±10 % of full scale value at constant viscosity | |
| Viscosity-stability | mean deviation ±7 %, max. 18 % (30-330 mm²/s) of full scale value | |
| Compressive strength | PS 200 | |
| Medium temperature | -20...+85 °C, optionally -20...+120 °C | |
| Ambient temperature | -20...+70 °C | |
| Media | oil | |
| Wiring | see section "Wiring" | |
| Materials (wetted) | Brass construction: CW614N nickelled, CW614N, 1.4305, 1.4310, hard ferrite | Stainless steel construction: 1.4571, 1.4310, hard ferrite |
| Materials (non-wetted) | CW614N nickelled | |
| Power supply | 18...30 V DC | |
| Power consumption | < 1 W | |
| Outputs | LABO-....I: Current output 4...20 mA (alternatively 0...20 mA) Max. load 500 Ohm | |
| | LABO-....U: Voltage output 0...10 V (alternatively 2...10 V) Load min. 1 kOhm | |
| | LABO-....F: Frequency output Transistor output "Push-Pull" (resistant to short circuits, and reversed polarity protected) I _{out} = 100 mA max. Selectable frequency, max. 2 kHz | |
| | LABO-....C: Transistor output "Push-Pull" I _{out} = 100 mA max. Pulse width 50 ms Pulse/Value is to be specified when ordering | |
| Electrical connection | for round plug connector M12x1, 4-pole | |
| Display | yellow LED (On = Normal / Off = Alarm / rapid flashing = Programming) | |
| Ingress protection | IP 67 | |
| Weight | see table "Dimensions and weights" | |
| Conformity | CE | |
| Installation location | Standard: horizontal inwards flow; other installation positions are possible; the installation position affects the metering and switching range. | |


Product Information

LABO-HR2VE-I/U/F/C


Signal output curves

Value x = Begin of the specified range
 = not specified range


Current output

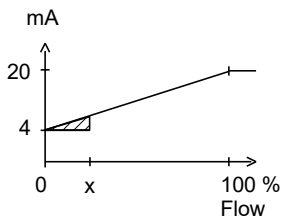

Voltage output

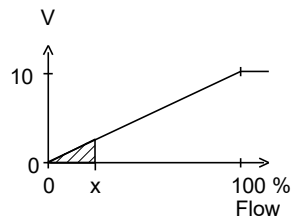

Frequency output

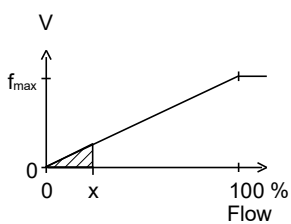

f_{\max} selectable in the range of up to 2000 Hz

Other characters on request.

Ranges


Details in the table correspond to metering ranges with horizontal inwards flow and increasing flow rate.

Standard type LABO-HR2VE


| Metering range l/min oil 30-330 mm ² /s | Q _{max} . Recommended l/min | Pressure loss bar at Q _{max} . oil |
|--|--|--|
| 10 - 80 | 100 | 4 |
| 20 - 120 | 120 | 5 |
| 30 - 140 | 140 | 5 |
| 50 - 160 | 160 | 7 |

Special ranges are available.


Reference Data:

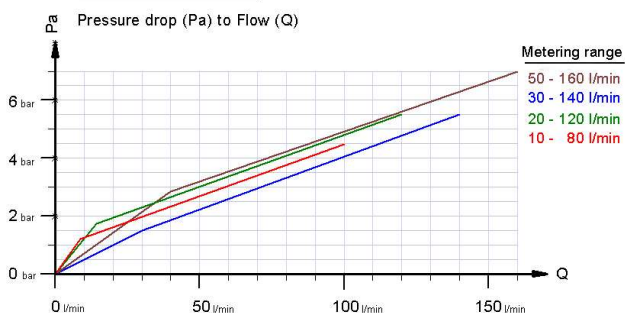

Wiring

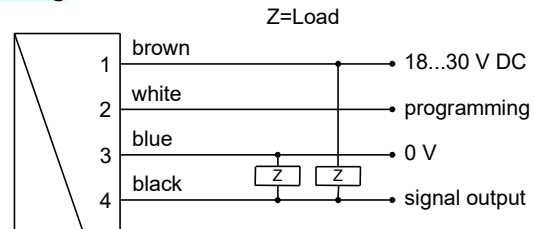

Connection example: PNP NPN



Before the electrical installation, it must be ensured that the supply voltage corresponds to the data sheet.

It is recommended to use shielded wiring.


The Push-Pull output can as desired be switched as a PNP or an NPN output.

Dimensions and weights

..including LABO-electronics

| DN | G | Types | L | ØD | SW | Ød | X | Weight kg |
|----|---------|-------------|-----|----|----|----|----|--------------|
| 32 | G 1 1/4 | HR2VE-032GM | 130 | 65 | 60 | 51 | 23 | 2.6 |
| 40 | G 1 1/2 | HR2VE-040GM | 170 | 65 | 60 | 56 | 24 | 3.2 |
| 50 | G 2 | HR2VE-050GM | 185 | 80 | 75 | 70 | 26 | 5.3 |

High temperature

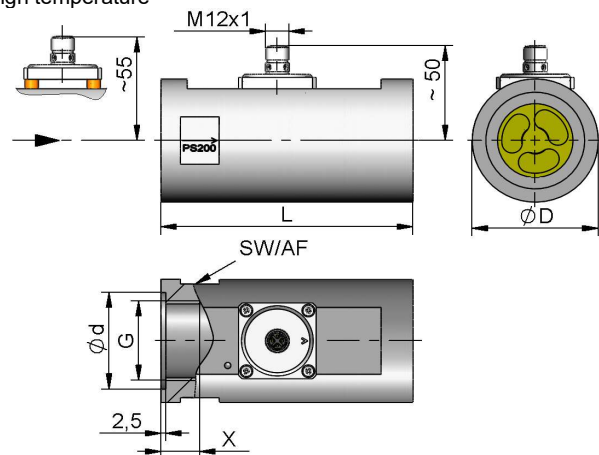

Product Information

LABO-HR2VE-I/U/F/C

Handling and operation

Note

The metering range end value can be programmed by the user via "teaching". Requirement for programmability must be stated when ordering, otherwise the device cannot be programmed.

The ECI-3 device configurator with associated software is available as a convenient option for programming all parameters by PC, and for adjustment.

The teaching option is not available for LABO-HR2VE-C.

- Include straight calming section of 5 x DN in inlet and outlet.
- Include a filter if the media are dirty (use magnetic filter for fer-ritic components)
- Under unfavorable pressure conditions, e.g. with a free outlet, there is a risk of cavitation.

Operation and programming

The teaching process can be carried out by the user as follows:

- The flow rate to be set is applied to the device.
- Apply an impulse of at least 0.5 seconds and max. 2 seconds duration to pin 2 (e.g. via a bridge to the supply voltage or a pulse from the PLC), in order to accept the measured value.
- When teaching has been successfully completed, pin 2 should be connected to 0 V, so as to prevent unintended programming.

The devices have a yellow LED which flashes during the programming pulse. During operation, the LED serves as a display for operating voltage (for analog output) or of switching status (for frequency or pulse output).

To avoid the need to transit to an undesired operating status for the purpose of teaching, the device can be provided ex-works with a teach-offset. The teach-offset point is added to the currently measured value before saving. The offset point can be positive or negative.

Example: The end of the metering range should be set to 80 %. However, only 60 % can be achieved without problem. In this case, the device would be ordered with a "teach-offset" of +20%.. At a flow rate of 60 % in the process, teaching would then store a value of 80 %.

There are many more parameters which can be programmed by the ECI-3 device configurator if necessary.

Ordering code

The basic device is ordered e.g. HR2VE-032GM100 with electronics e.g. LABO-HR2VE-CPSD

HR2VE - 1. 2. 3. 4.
 G

LABO - HR2VE - 5. 6. 7. 8.
 S

○=Option

| 1. Nominal width | |
|------------------------|---|
| 032 | DN 32 - G 1 ¹ / ₄ |
| 040 | DN 40 - G 1 ¹ / ₂ |
| 050 | DN 50 - G 2 |
| 2. Process connection | |
| G | female thread |
| 3. Connection material | |
| M | brass |
| K | stainless steel |

| 4. Metering range oil for horizontal inwards flow | |
|---|-----------------|
| 080 | 10... 80 l/min |
| 120 | 20... 120 l/min |
| 140 | 30... 140 l/min |
| 160 | 50... 160 l/min |

| 5. Signal output | |
|------------------|--------------------------|
| I | current output 4...20 mA |
| U | voltage output 0...10 V |
| F | frequency output |
| C | pulse output |

| 6. Programming | |
|----------------|--|
| N | cannot be programmed (no teaching) |
| P | full scale value can be programmed (teaching possible) |

| 7. Electrical connection | |
|--------------------------|--|
| S | for round plug connector M12x1, 4-pole |

| 8. Optional | |
|-------------|---|
| D | media temperature up to 120 °C (with spacers) |

Required ordering information

For LABO-HR2VE-...F:

Output frequency at full scale

 Hz

Maximum value: 2000 Hz

For LABO-HR2VE-...C:

The volume must be specified for the pulse output version (with numerical value and unit) which will correspond to one pulse.

Volume per pulse (numerical value)

Volume per pulse (unit)

Options LABO

Special range for analog output:

 l/min

<= Metering range

(Standard=Metering range)

Special range for frequency output:

 l/min

<= Metering range

(Standard=Metering range)

Power-On delay period (0...99 s)

 s

(time after applying power during which the outputs are not activated or set to defined values)

Teach-offset

 %

(in percent of the metering range)

Standard = 0 %

Options HR2VE

- Special values

Further options available on request.

Accessories

- Cable/round plug connector (KB...)
- Device configurator ECI-3